
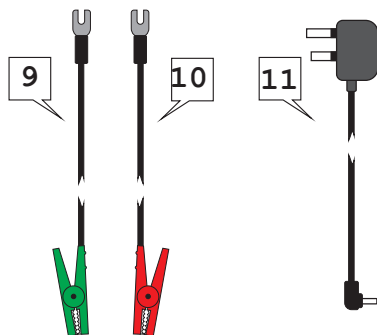
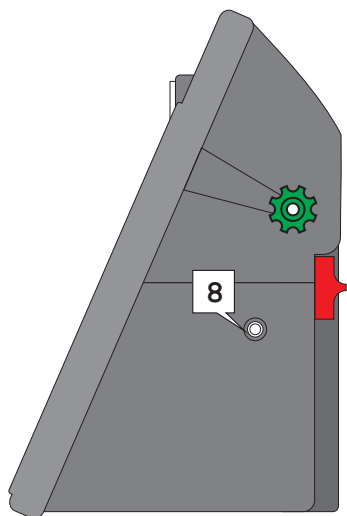
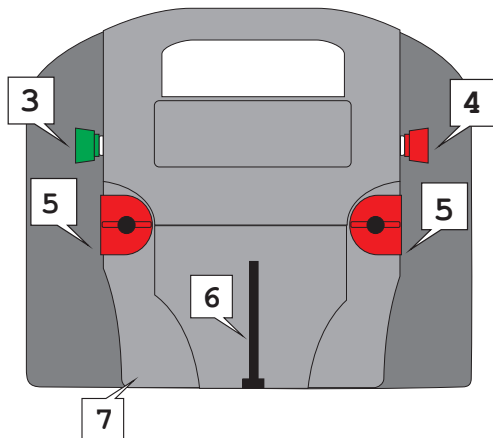


Installation Guide - EKS.25, EKS.5H

Please read before installation.
Please read safety guidelines leaflet.

What's in the Box? Getting to Know Your Energizer.

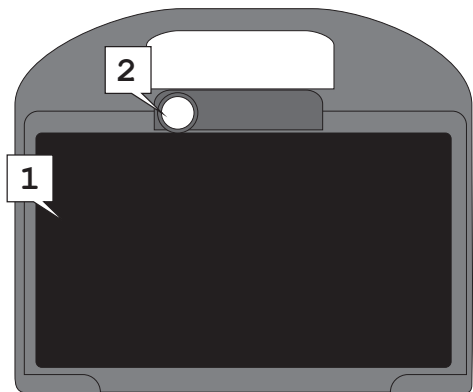

Key


1. Solar panel
2. Switch with pulse/low battery indicator
3. Ground connection terminal
4. Fence connection terminal
5. Battery access twist knobs
6. Mounting slot
7. Battery box
8. Battery charge socket
9. Ground connection lead
10. Fence connection lead
11. Battery charger

Connecting It All Together

The EKS.25 and EKS.5H energizers include an internal 12v battery and are ready to operate out of the packaging. We do recommend charging the energizer for 12 hours prior to use. Please see the section on charging the battery.


Lead Connection

Unscrew the terminals enough to slide in the fork terminals on the ground and fence leads. Securely tighten.

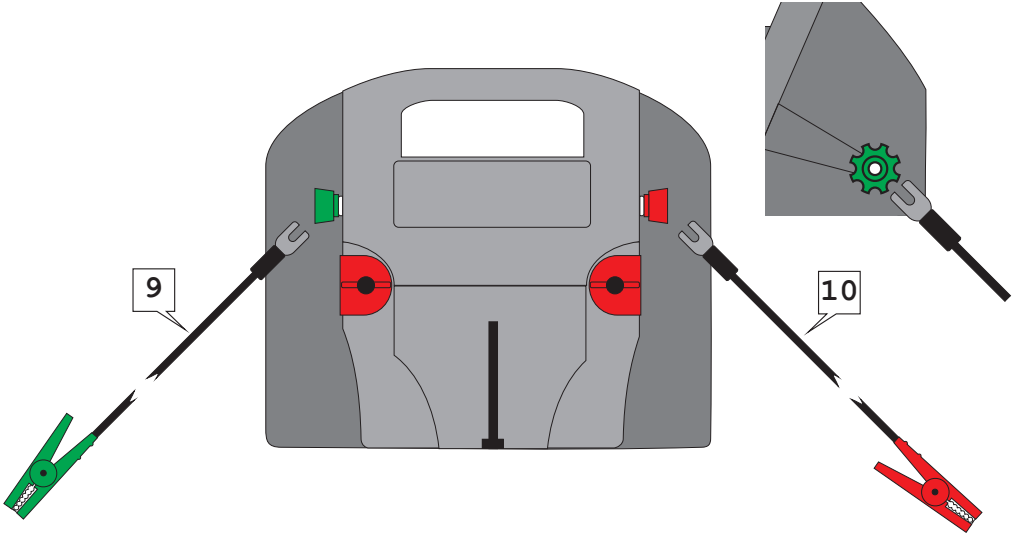


Fence Connection

Connect the lead with the red clip to the fence (from red terminal) & the green clip (from the green terminal) to the ground rod. We recommend a minimum of one ground rod driven approximately 5' into the ground. If possible, position the energizer with the panel facing south and with a clear line of sight avoiding obstructions such as tree cover.

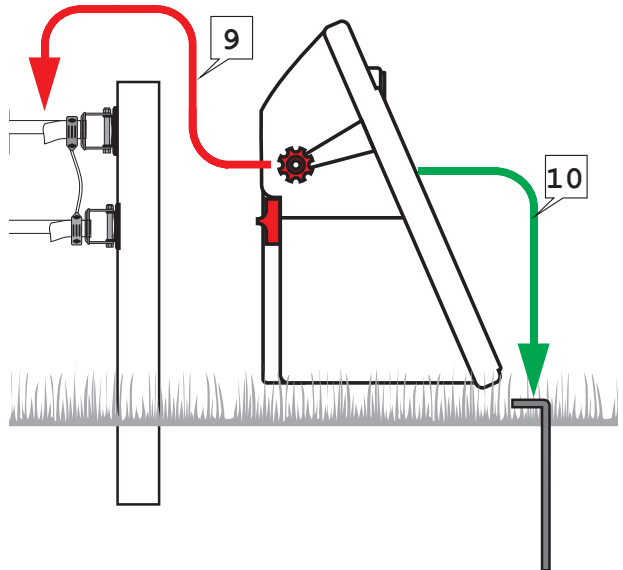


Optional Mounting

The EKS.25 or EKS.5H energizer can be mounted on steel y-posts, steel t-posts, and onto standard fence posts using screws and bolts with washers.

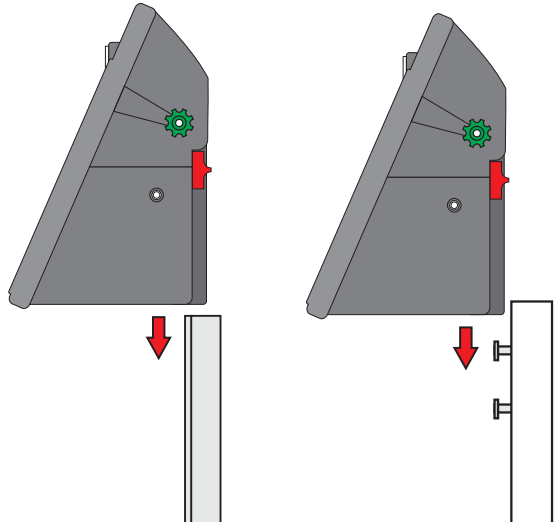

Switching On and Off


Press the switch on the front of the energizer. The switch will flash green in time with the pulse. It will flash red when battery power is low.

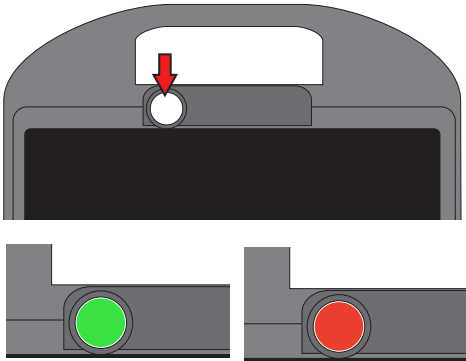

Charging the Battery


From time to time the battery may need to be recharged. It is especially important to keep the battery charged when the energizer is not in use and stored away from direct sunlight. To charge, insert the male jack plug on the charger into the socket on the side of the energizer, and plug the head into the wall socket.

The charger must NOT be used to operate the energizer from a mains supply.

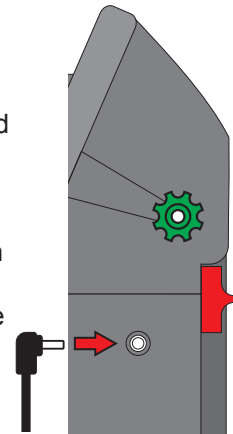

Battery Access

If access to the battery is required for replacement or checking, rotate the red twist knobs outwards 90-degrees, and hinge the panel section forward. The battery can be removed by unscrewing the battery retaining strap.

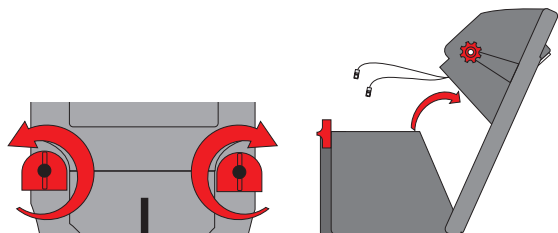

Troubleshooting

You should have a minimum of 3kv on your fence line to be effective. In principle, electric fencing is a simple concept. If your energizer is working, then there can only be two other places to look - your fence line or ground system.

Checking the Energizer

Sound and Sight: Most energizers emit an audible tick caused by the firing of the output transformer. This is a good indication that the energizer is working. The indicator light or fence monitor should be pulsing or flashing. The energizer has a pulse indicator, and this should be operating at all times. If the light is flashing green, it usually means that the energizer is working correctly. This indicates that the problem is somewhere on the fence system. If the light is flashing red, then your battery needs to be charged. **Flash Test:** Disconnect the alligator clips from the fence and ground rod. Clip the alligator clips together making sure the metal jaws contact each other. Slowly draw them apart. You should get a short (1-2mm) spark jumping from one to the other. **Use a Tester:** Disconnect completely from the ground rod and fence, and take a reading across the terminals. Depending on the model of energizer, you should have a reading between 7 and 10kv.

Checking the Ground System

Low Voltage: If there is high voltage on your ground rod, it is missing from your fence line. The greater the depth and surface area under the ground, the more efficiently your ground rod will collect the pulse as it returns through the earth. If you get a shock from your ground rod, or your tester shows voltage when touched to the ground rod, you can improve your whole system by adding further ground rods. Link additional ground rods with wire, spacing them about 10 ft apart.

Checking the Fence Line

Clear Lines: An electric fence operates as an open circuit. The fence is positive and the ground itself is negative. By touching both fence and ground, the animal completes the circuit and gets the shock. If anything touches both ground and fence, other than the animal, it reduces the effective voltage on the fence line. The fence line must not touch anything that is not insulated from the ground. Check to make sure the fence line is clear from all vegetation, and that wooden posts, metal posts, and gates are not touching the line. Check all insulators. The fence line can occasionally come unhooked from insulators and touch the posts, and broken insulators can cause leaking of power into the post and ground. **Line Problems:** If you are joining two sections of tape or wire, try to use correct connectors to ensure the conductors in both sections are connected. Check the condition of the line. If the metal conductors within the line are broken, it will affect the efficiency of the fence. Greater metal content means greater efficiency. **Netting:** Netting is closer to the ground than other forms of fence, so it requires more maintenance to keep clear from vegetation. All horizontal lines, apart from the bottom, must be kept clear from the ground. If your net is sagging and touching the ground, add extra posts. The net must also be clear of contact from other forms of fencing, arks, and chicken wire runs. Check the metal spikes on the posts, occasionally wires can get caught up or slip down to the metal spike and take power to ground.

Remember, if your energizer and ground system are fine, the problem **will** be somewhere on your fence line!